 


TopBrewer

Cleaning Manual Pro






DAILY CLEANING



USING YELLOW TABS

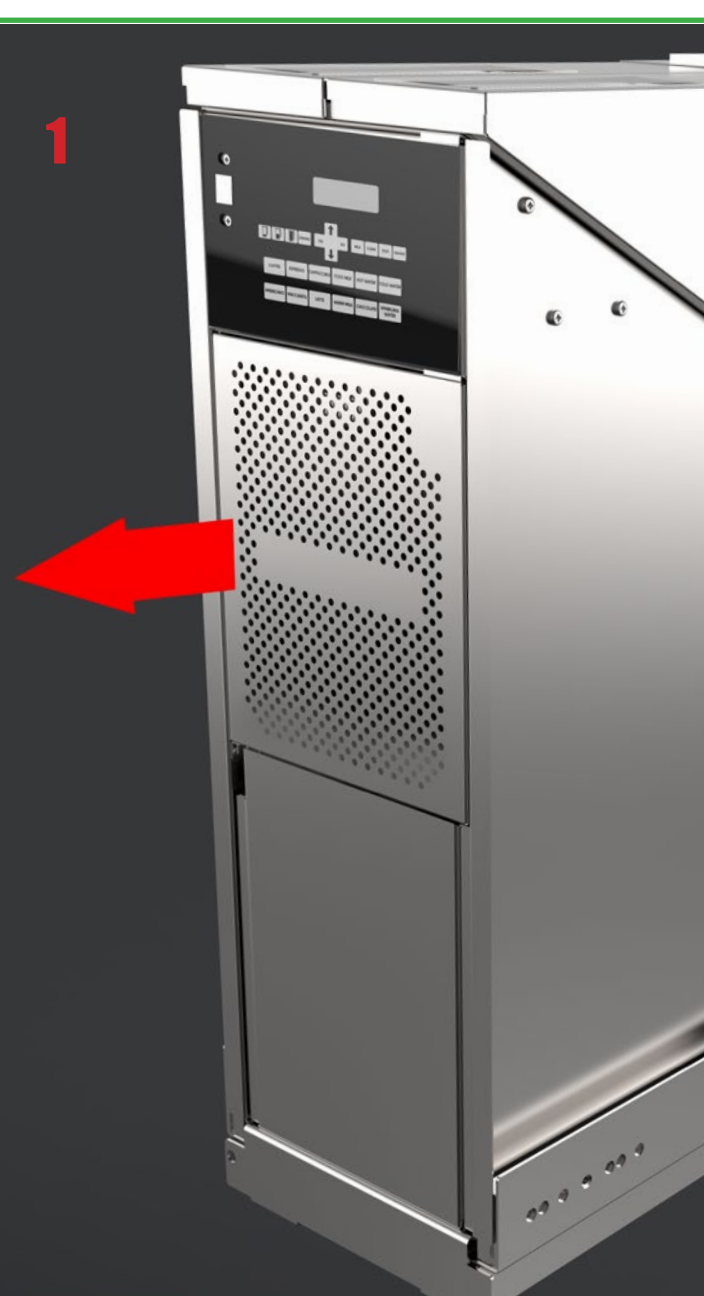

1


OPEN THE STAINLESS STEEL DOOR

Open the hinged stainless steel door by pushing the right side until it pops out and pull it towards you. The machine goes into neutral mode with the bottom piston raised, ready for cleaning.



REMOVE THE MILK FOAMER

Gently remove the outer metal casing (1) of the milk foamer by twisting the metal head anti-clockwise. Slide down the black casing (2).

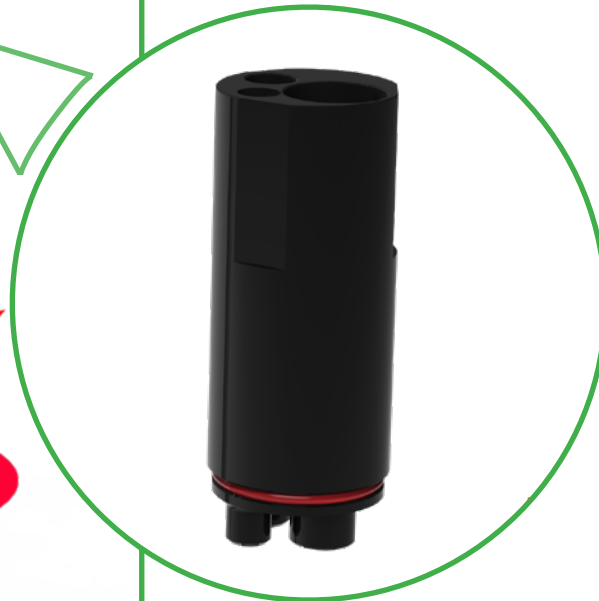

3

CLEANING HEAD

Fit the Cleaning Head onto the faucet by sliding it onto the milk foamer and secure it by twisting the outer metal casing clockwise. The Cleaning Head ensures proper backflush which cleans the milk foamer as well as the milk lines that go into the fridge. The hot water goes directly into the drain.



! BE EXTRA AWARE !

Take care that the red-marked o-rings remain in position during and after cleaning.



4

MOVE SCRAPER

The scraper can be moved freely to allow access to all components. Start by pulling out the scraper and brush around the grey base plate, using the long-handled brush in order to remove any ground coffee deposits. Brush the deposits into the dregs bin.



Danger hot




5

WIPE TOP & BOTTOM OF PISTON

Having removed most of the coffee grounds, focus next on wiping both the top and bottom piston sieves as well as around the top piston O-ring.



Danger hot

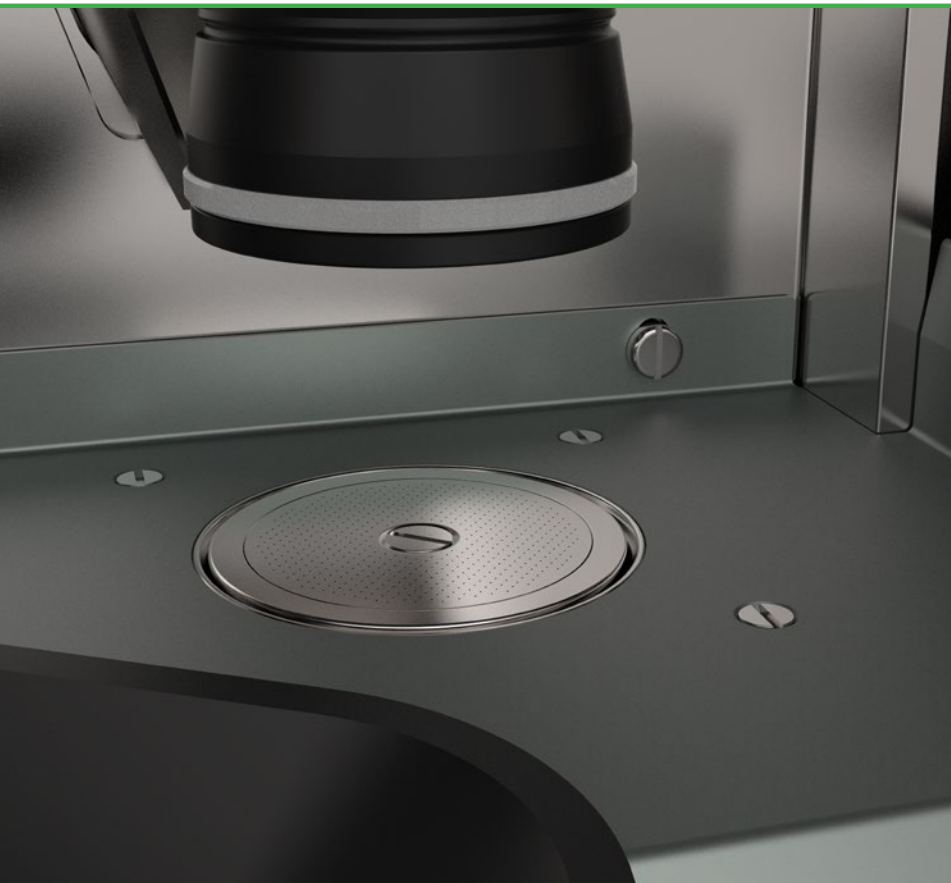

6

CLEAN CYLINDER

The stainless steel cylinder top must be completely clean with no coffee remains. Push the scraper arm back in place.



7

SCRAPER BACK


Move the scraper back into the position shown. Place a TopBrewer Yellow cleaning tablet in the scraper. Close the stainless door.



8

SELECT CLEAN


Select "CLEAN" from the left pane menu. The process will take approximately 2 minutes and "Machine is ready" will appear in the status bar in the App once completed.

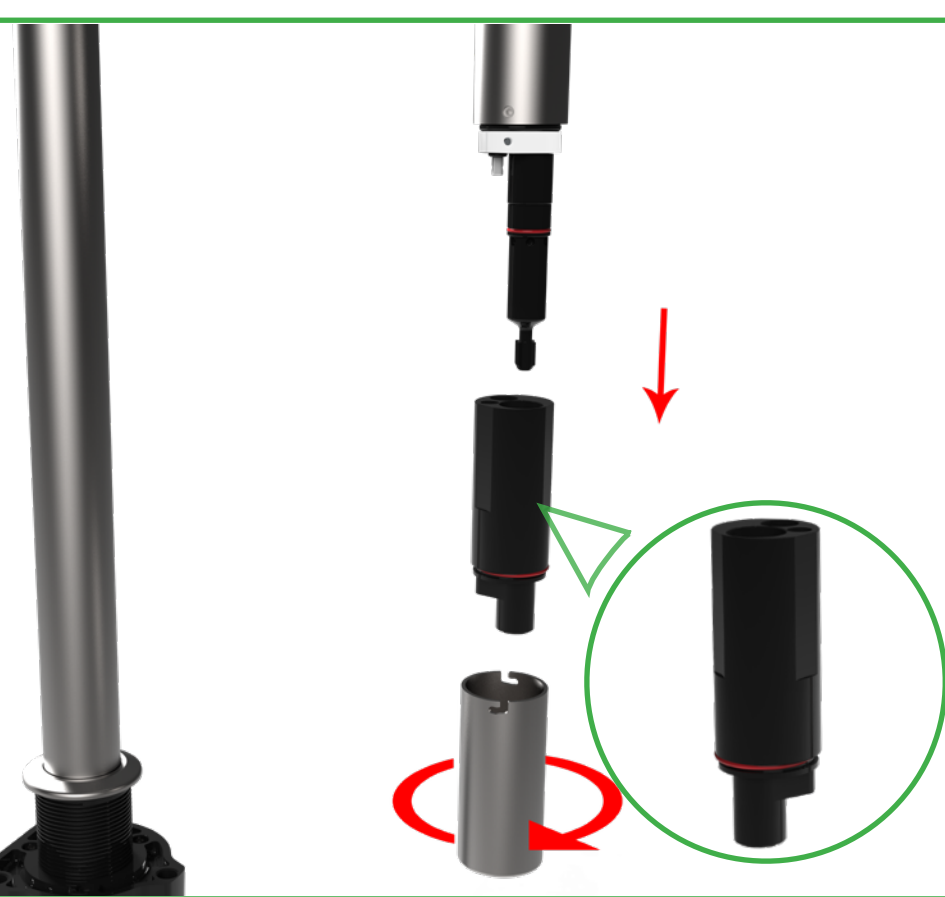

9

REMOVE CLEANING HEAD

Remove the Cleaning head from the faucet.

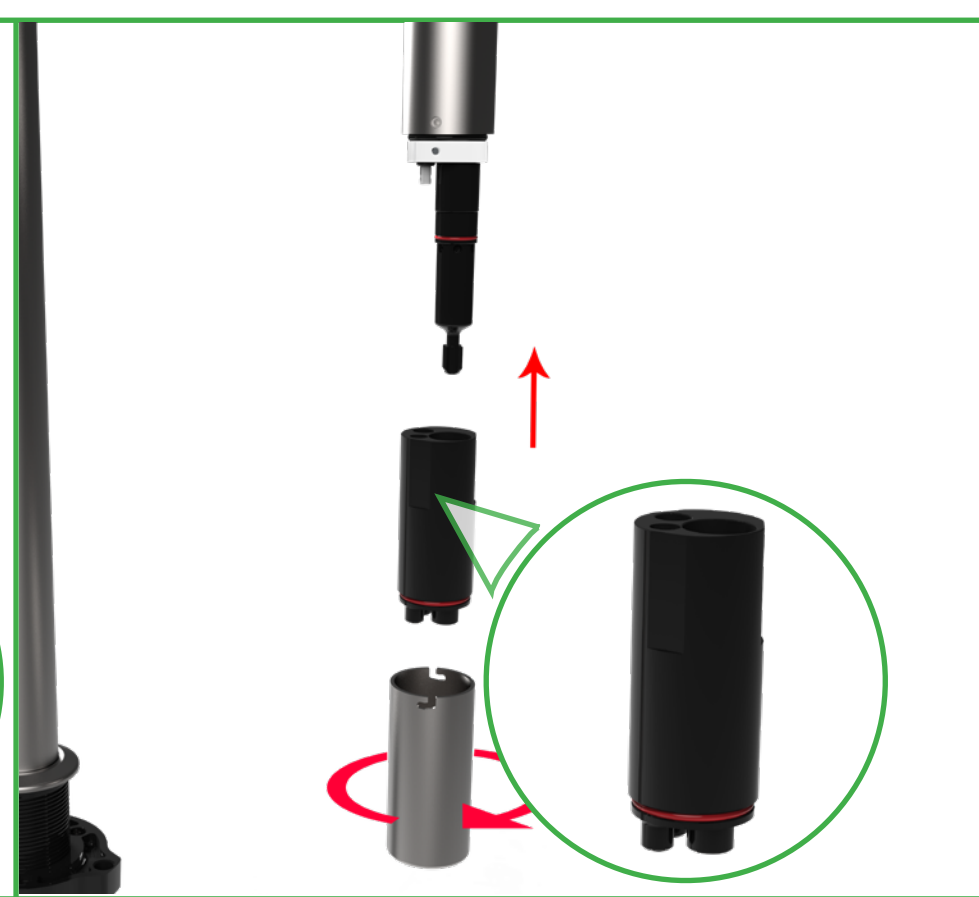

10

RE-ATTACH MILK FOAMER

Re-attach the milk foamer and then re-attach the outer metal casing (2) by twisting the metal head clockwise.



11

DISPENSE WARM MILK

Prior to use, prime the TopBrewer by dispensing one warm milk or a milk based drink.

Before proceeding to the milk clean, please ensure that you have done the daily cleaning process. This is the optimal way to maintain your TopBrewer.


MILK CLEANING



We recommend doing the milk clean 3 times a week. Some milk types might require more cleaning, depending on how homogenic the milk is, the fat content, if it's organic etc.

USING RED TABS



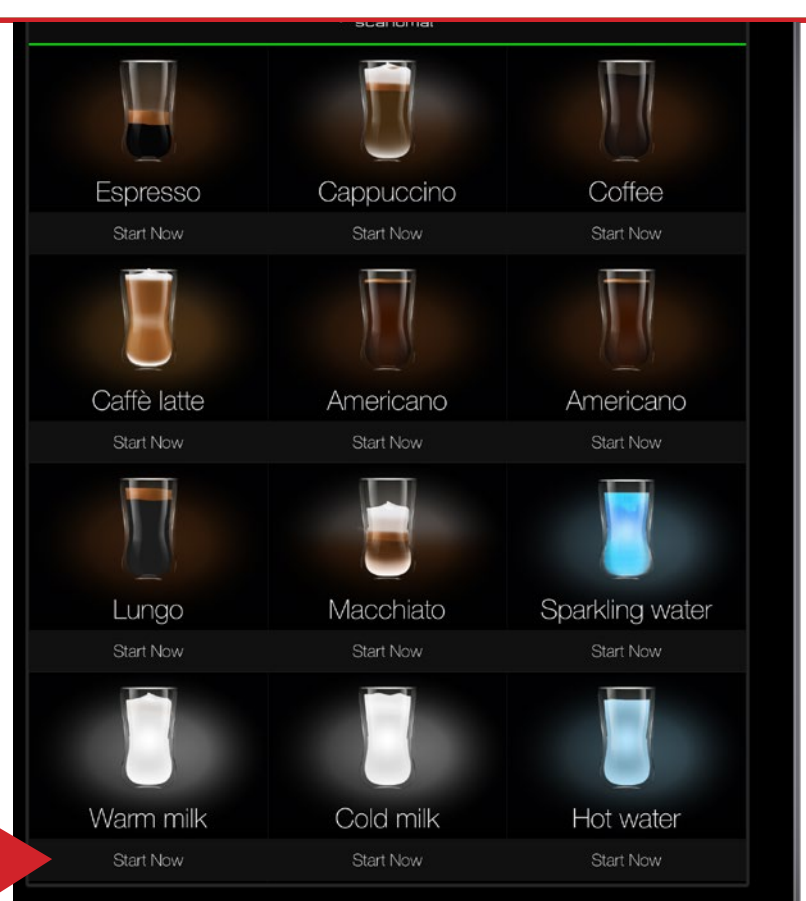

1

RINSE BRIEFLY WITH COLD WATER

Fill a container with just a cup of fresh water and place it inside the fridge replacing the milk. Click the "Warm Milk" or "Cold Milk" button, essentially pushing the milk out that is present in the tubes currently.



2


ADD RED TAB

Add a Red Tab to a container that holds at least 600 ml / 21 oz of water. Place the container under the faucet. Customize a "Hot Water" on your smartphone or tablet, so that it dispenses 100ml (3,5oz) and set number of cups to 6 which multiplies the volume by 6. The water will now slowly dissolve the tablet.



TopBrewer Red Tab

We created a special formula, so that by alternating weekly between the red and white tablet, we ensure that both lactose, bacteria, fats and lime are removed from your TopBrewer.

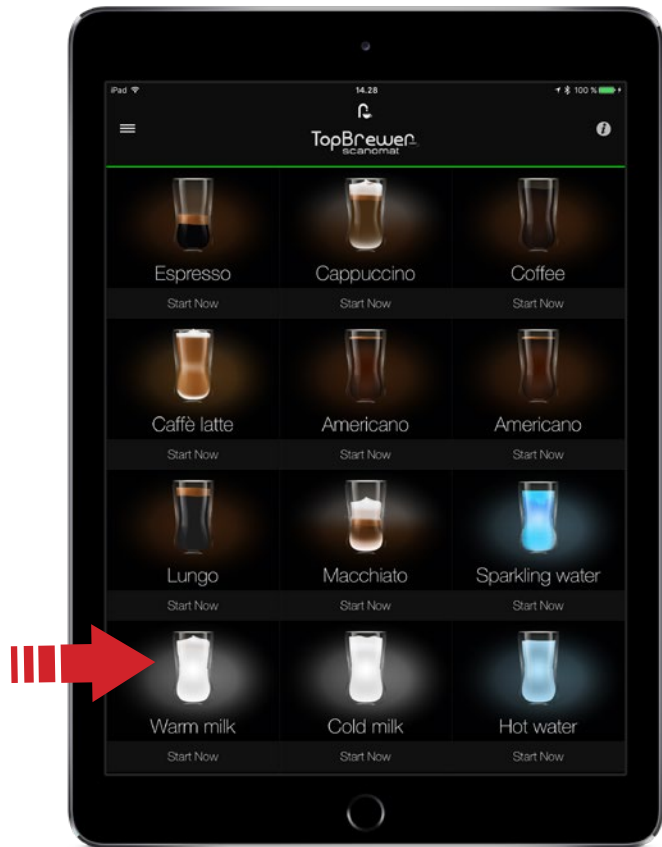

3


INSERT MILK LINES INTO CONTAINER

Next step, place the container inside the fridge and insert the milk line into the container. On your iPad or Android tablet, select "Customize" beneath the "Warm Milk" icon.

4

SLIDE NUMBER OF CUPS

Slide the number of cups to 8 and select "Start now". The machine will run the cleaning liquid through the system and clean the milk foamer.

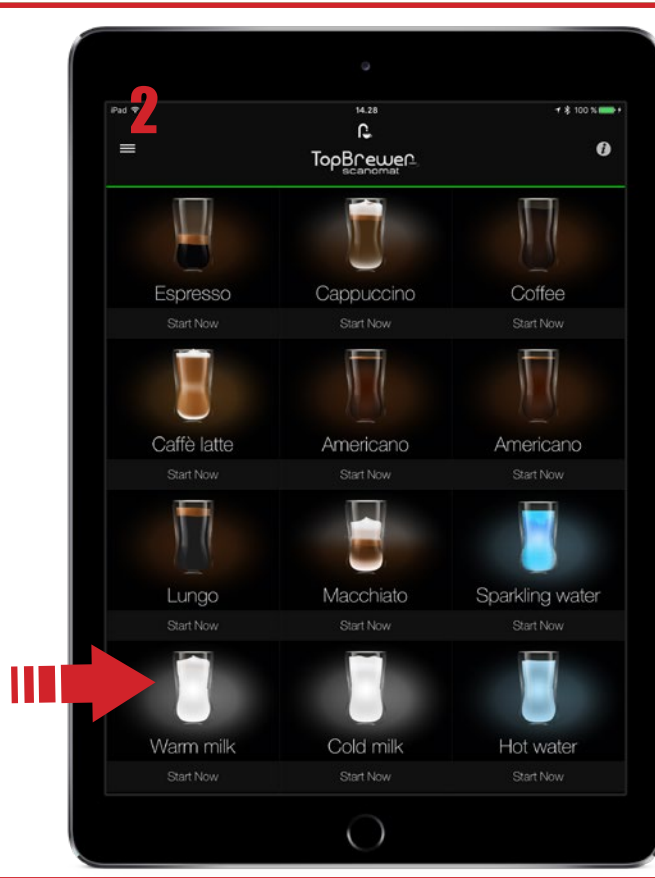


5

EMPTY

Throw away any remaining water from the container, and fill it with cold clean water.

Repeat step 2 and 3.

Once done, put the milk back in place and perform a prime by selecting a "Warm Milk" from the menu.

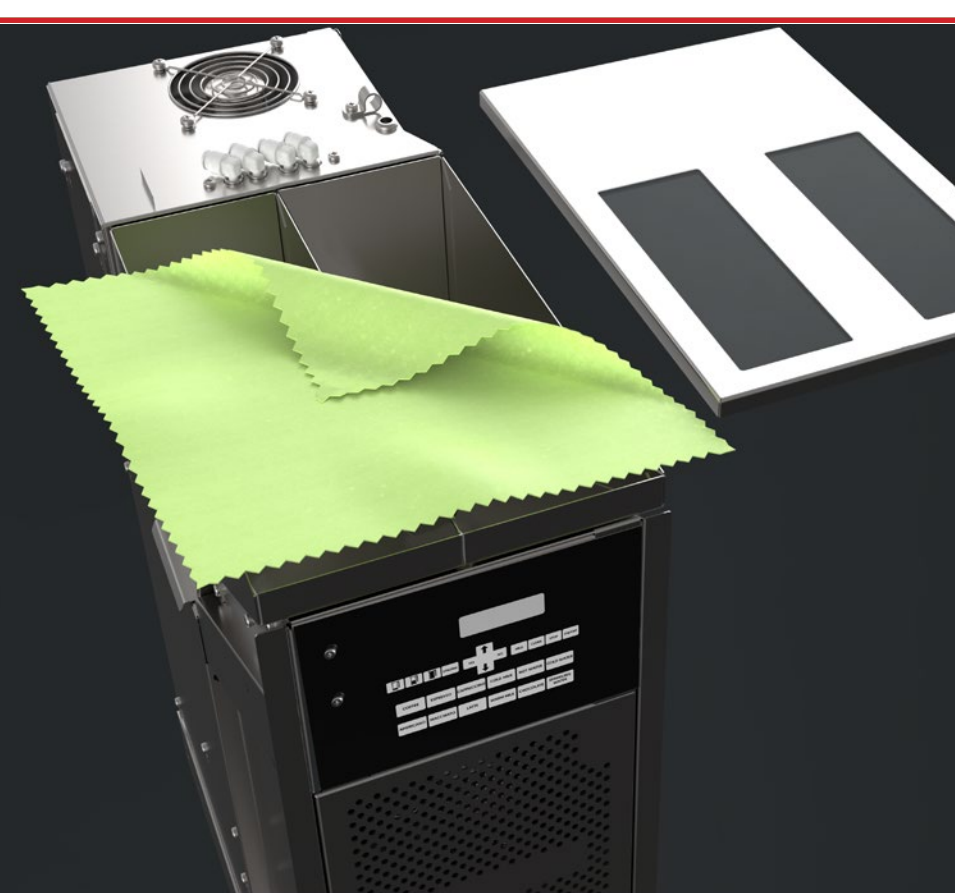

WIPE BEAN HOPPER

Remove lid from bean hopper and wipe with a damp cloth prior to filling it with beans. (Fresh TopBrewer beans have a great flavour, therefore do not overfill the hoppers to allow beans to always stay their best – store unused beans in a sealed bag somewhere cool)



DREGS BIN - MACHINE IS ON

In the status bar of the app, the machine will notify you when the dregs bin containing the coffee remains is full. When removing the dregs bin the unit will reset its counting system and will assume that you have emptied it. Therefore empty the dregs bin once removed from the unit.

SHOP

shop.scanomat.com

In our webshop you have the opportunity to purchase a wide array of products:

Everything from our coffee range to the regular maintenance products which ensure your TopBrewer coffee tastes its best.



Red Tabs 10 pcs - SKU 4302631



Red Tabs 50 pcs - SKU 4302630



Yellow Tabs 25 pcs - SKU 4302339

The screenshot displays the Scanomat webshop interface. At the top, navigation tabs include 'TIL FORSIDEN', 'AMOKKA KAFFE', 'INSTANT KAFFE', 'TE OG JUICE', 'MÆLK OG CHOKOLADE', 'TILBEHØR', and 'RENGØRING'. The main banner features three promotional tiles: 'COLOMBIA ALMA' (highlighted as 'NEW!' with a yellow arrow), 'UDFORSK VORES SORTIMENT - OG BLIV FRISTET EXPLORE', and 'LIDT SØDT TIL KAFFEN!' with an image of a chocolate cupcake. Below the banner, a 'CLEANING EQUIPMENT' section shows a coffee machine and a 'CLIP NATURAL, FAIR' product. A 'NYE PRODUKTER' (New Products) section contains a grid of coffee products: 'DECAF MAYA' (250g), 'COLOMBIA ALMA' (250g, marked 'NEW'), 'NOCAF NOTE' (1000g), 'AMOKKA DÅSE INKL. 220 GRAM PERU KAFFE', and 'AMOKKA D... AMOK...'. At the bottom, another grid shows 'NEPAL HIMALAYA', 'EL SALVADOR', and 'SWEET NICA' coffee products. A 'CLIPPER' product is also visible in the bottom right corner.